

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY/ON
MUTE
MENU
P - EQ
1/2/3/4/5
6/7/8/9/0-10
USB
10+
OSD
ZOOM
SETUP
SUBTITLE
VOL+
VOL -
SKIP NEXT/TUNING+
SKIP PREV/TUNING -
UP
DOWN
LEFT
RIGHT
←
REPEAT/INFO
SLEEP/TIMER
ST/MONO
TITLE

PROG/MEM
A - B
EJECT
STOP
REW/PRESET-
PLAY/PAUSE
FWD/PRESET+
AUDIO
AUX
CLOCK
ANGLE
SLOW
TIME
LOUDNESS
SCAN
DIMMER
S - BASS

STANDBY/ON, POWER, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0USB, / SOURCE, 10+, OSD, ZOOM, SETARRIBA, SUBTITLE, VOL+, VOL, SKIP NEXT/TUNING+, SKIP PREV/TUNING, ABAJO, IZQUIERDA, DERECHA, REPEAT/INFO, BACK, SLEEP/TIMER, SLEEP, ST/MONO, TV/DTV, TITLE, INFO, PROG/MEM, EPG, FAV, EJECT, / NET TV, STOP, / SMART, REW/PRESET, VERDE, PLAY/PAUSE, AMARILLO, FWD/PRESET+, AZUL, AUDIO, AUX, CLOCK, ANGLE, SLOW, SIFT+BACK, TIME, LOUDNESS, SCAN, DIMMER, BASS, .