

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



| | | | | |
|-----------|--------------------|------------|--------------------|-----------|
| | STEREO | | INPUT NEXT | |
| | PAHSE | | CH SELECT | T |
| | AUTO/DIRE | V | | TV |
| | PAUSE | | ECO | |
| 5 | STOP | IT | < PRESET | N |
| 0 | REW | | PRESET > | |
| CE | PLAY | | | |
| | FWD | | | |
| | AUDIO PRAME | E | | |
| | BAND | T | | |
| | BD | | | |
| | BT | | | |
| | CD | | | |
| | DVD | | | |
| | GAME | | | |
| | SAT/CBL | | | |
| | TUNER | | | |
| | TV | | | |
| | BASS+ | -+ | | |
| | BASS - | - - | | |
| | TRE+ | f | | |
| | TRE - | - | | |
| | CH LEV+ | f | | |
| | CH LEV - | VN | | |
| | INPUT PRE | T | | |

ORIGINAL, SARRIBAERIOR, POWER RECEIVER, POWER, MUTE, HOME MENU, MENU, S RETREIVER, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SIG SEL, / SOURCE, DISP, MIDNIGHT, ADV SURR, ALC/STANDARD, VOLUME+, VOL+, VOLUME, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, SLEEP, TV/DTV, DIMMER, INFO, STEREO, EPG, PAHSE, FAV, AUTO/DIRECT, / NET TV, PAUSE, STOP, / SMART, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO PRAMETER, BAND, DVD, GAME, SAT/CBL, SHFIT+6, TUNER, BASS+, VOL+, BASS, SHFIT+ VOL, TRE+, TRE, CH LEV+, CH LEV, INPUT PREV, Keys Functions LAYOUT, Code, 689, 0HELP DESK / SARRIBAPORT, infosuperior, electronicscom, COMPATIBLE, DEVICES, VISIT OUR WEBSITE, TO DISCOVER, WWW.SARRIBAERIOR, ELECTRONICSCOM, INPUT NEXT, CH

SELECT, ECO, PRESET, PRESET x, SHIFT, .