

# FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



<b>POWER ON</b>	<b>OPEN/CLOSE</b>
<b>AUDIO</b>	<b>PAUSE</b>
<b>MENU/POPUP MENU</b>	<b>STOP</b>
<b>CLEAR</b>	<b>REW</b>
<b>1/2/3/4/5</b>	<b>PLAY</b>
<b>6/7/8/9/0</b>	<b>FWD</b>
<b>HDMI MODE</b>	<b>POWER OFF</b>
<b>+10</b>	<b>PURE DIRECT</b>
<b>DISPLAY</b>	<b>SRCH</b>
<b>PICTURE ADJUST</b>	<b>RESOLUTION</b>
<b>TOP MENU</b>	<b>SETUP</b>
<b>SUBTITLE</b>	<b>ANGLE</b>
<b>SKIP NEXT</b>	<b>REPEAT</b>
<b>SKIP PREV</b>	<b>PAGE+</b>
<b>UP</b>	<b>RAND</b>
<b>DOWN</b>	<b>CALL</b>
<b>LEFT</b>	<b>A - B</b>
<b>RIGHT</b>	<b>RED/A</b>
<b>ENTER</b>	<b>GREEN/B</b>
<b>RETURN</b>	<b>YELLOW/C</b>
<b>DISC LAYER</b>	<b>BLUE/D</b>
<b>HOME</b>	
<b>DIMMER</b>	
<b>PROG/DIRECT</b>	
<b>MODE</b>	

ORIGINAL, SARRIBAERIOR, POWER ON, POWER, AUDIO, MUTE, MENU/POPARRIBA MENU, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 0HDMI MODE, / SOURCE, DISPLAY, PICTURE ADJUST, TOP MENU, SUBTITLE, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, DISC LAYER, SLEEP, HOME, TV/DTV, DIMMER, INFO, PROG/DIRECT, EPG, MODE, FAV, OPEN/CLOSE, / NET TV, PAUSE, STOP, / SMART, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, POWER OFF, PURE DIRECT, SRCH, RESOLUTION, SETARRIBA, ANGLE, REPEAT, PAGE+, RAND, CALL, ROJO/A, ROJO, VERDE/B, AMARILLO/C, AZUL/D, Keys Functions LAYOUT, Code, 692, HELP DESK / SARRIBAPORT, infosuperior, electronicscom, COMPATIBLE, DEVICES, VISIT OUR WEBSITE, TO DISCOVER, WWW.SARRIBAERIOR, ELECTRONICS COM, .