

# FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



/ AUDIO
DISC MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
/ INPUT SELECT
TIME SLIP
DISPLAY
DUBBING
SETUP
TEXT
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER / OK
RETURN
TIMER PROG.
SAT. LINK
INFO / i+
GUIDE
TOP MENU

OPEN / CLOSE
PAUSE
STOP
REC
REW
PLAY
FWD
DVD
HDD
VCR
HDMI
REC MODE
VARIABLE SKIP
VARIABLE REPLAY
SUBTITLE
PROG. +
PROG. -
RED
GREEN
YELLOW / MODE
BLUE / SEARCH

POWER, / AUDIO, MUTE, DISC MENU, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 0/6/7/8/9/, 0 / INPUT SELECT, SOURCE, TIME SLIP, DISPLAY, DUBBING, SETARRIBA, TEXT, SKIP NEXT, SKIP, PREV, ABAJO, IZQUIERDA, DERECHA, ENTER / OK, RETURN, BACK, TIMER PROG, SLEEP, SAT LINK, TV/DTV, INFO / i+, INFO, GUIDE, EPG, TOP MENU, FAV, OPEN / CLOSE, / NET TV, PAUSE, STOP, / SMART, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, DVD, HDD, VCR, HDMI, REC MODE, VARIABLE SKIP, VARIABLE REPLAY, SUBTITLE, PROG+, PROG, AMARILLO / MODE, AZUL / SEARCH, .