

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY ON/OFF
MUTE
DVD MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
KEY LOCK
PROGRAM
TITLE MENU
ZOOM
SETUP
SUBTITLE
SLOW FWD
SLOW REW
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
A-B
AUDIO MODE
RANDOM

DISPLAY
BOOKMARK
OPEN / CLOSE
PAUSE
STOP
SEARCH
REWIND
PLAY
FORWARD
AUDIO
3D
REPEAT
DIGEST
PBC
ANGLE

STANDBY ON/OFF, POWER, MUTE, DVD MENU, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0KEY LOCK, / SOURCE, PROGRAM, TITLE, ZOOM, SETARRIBA, SUBTITLE, SLOW FWD, VOL+, SLOW, REW, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, SLEEP, AUDIO MODE, TV/DTV, RANDOM, INFO, DISPLAY, EPG, BOOKMARK, FAV, OPEN / CLOSE, / NET TV, PAUSE, STOP, / SMART, SEARCH, ROJO, REWIND, VERDE, PLAY, AMARILLO, FORWARD, AZUL, AUDIO, REPEAT, DIGEST, PBC, ANGLE, BLU, .