

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



MENU
C
1/2/3/4/5
6/7/8/9/0
SOURCE
PRESETS
SCREEN
LANG.
V+
V -
P+
P -
UP
DOWN
LEFT
RIGHT
OK / SELECT
RETURN
SLEEP
/ INFO
EPG
FAV

RED / ZOOM / ▲
GREEN / REPEAT / ▼
YELLOW / ROOT
BLUE / TITLE
SEARCH MODE
/ SWAP
DISPLAY
SUBTITLE
SKIP NEXT
SKIP PREV
HDMI CONTROL
PAUSE
STOP
REC
REW
PLAY
FWD

POWER, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, / SOURCE, PRESETS, SCREEN, LANG, VOL+, VOL, ABAJO, IZQUIERDA, DERECHA, OK / SELECT, RETURN, BACK, SLEEP, / INFO, INFO, EPG, FAV, / NET TV, / SMART, ROJO / ZOOM /, ROJO, VERDE / REPEAT /, VERDE, AMARILLO / ROOT, AMARILLO, AZUL / TITLE, AZUL, SEARCH MODE, / SWAP, DISPLAY, SUBTITLE, SKIP NEXT, SKIP PREV, HDMI CONTROL, PAUSE, STOP, REC, REW, PLAY, FWD, .