

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY / ON
MUTE
[Icon] / MENU
[Icon] / EXIT
1/2/3/4/5
6/7/8/9/0
[Icon] / SOURCE
SELECT USB
TITLE LIST DISC MENU
COPY
SUBTITLE
TXT
PROG+
PROG -
UP
DOWN
LEFT
RIGHT
[Icon] / OK
[Icon] / RETURN
DTV / ANALOG
INFO
GUIDE
FAV LIST
EJECT

PAUSE
STOP
REC
REW
PLAY
FWD
TIMER
DVD
HDD
DVD
PLAY LIST TITLE MENU
REC MODE
SKIP NEXT
SKIP PREV
REPEAT
RADIO
REC PAUSE
RED
GREEN
YELLOW
BLUE

STANDBY / ON, POWER, MUTE, / MENU, MENU, / EXIT, EXIT, 1/2/3/4/5, 6/7/8/9/, 0 / SOURCE, / SOURCE, SELECT, USB, TITLE LIST, DISC MENU, COPY, SUBTITLE, TXT, PROG+, PROG, ABAJO, IZQUIERDA, DERECHA, / OK, / RETURN, BACK, DTV / ANALOG, TV/DTV, INFO, GUIDE, EPG, FAV LIST, FAV, EJECT, / NET TV, PAUSE, STOP, / SMART, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, TIMER, DVD, HDD, LIST TITLE MENU, REC MODE, SKIP NEXT, SKIP, PREV, REPEAT, RADIO, REC PAUSE, .