

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
INPUT
REC. MODE
DISPLAY
SYNCHRO REC.
SYSTEM MENU
PROG+
PROG -
UP
DOWN
LEFT
RIGHT
ENTER
/ RETURN
TIMER
TV / DVD
INFO
GUIDE
EJECT

PAUSE
STOP
REC
REW / DAY -
PLAY
FWD / DAY+
AUDIO
TOP MENU
DVD
HDD
ZOOM
SUBTITLE
SKIP NEXT / PAGE+
SKIP PREV / PAGE -
TV / RADIO
TITLE LIST
MARKER
REC STOP
RED
GREEN
YELLOW
BLU

POWER, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT, SOURCE, REC, MODE, DISPLAY, SYNCHRO REC, SYSTEM, PROG+, PROG, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, TIMER, SLEEP, TV / DVD, TV/DTV, INFO, GUIDE, EPG, FAV, EJECT, / NET TV, PAUSE, STOP, / SMART, ROJO, REW, DAY, VERDE, PLAY, AMARILLO, FWD / DAY+, AZUL, AUDIO, MUTE, TOP MENU, DVD, HDD, ZOOM, SUBTITLE, SKIP, NEXT, PAGE+, SKIP, PREV, PAGE, TV / RADIO, TV/DTV, TITLE LIST, MARKER, REC STOP, BLU, .