

# **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



<b>POWER</b>
<b>MUTE</b>
<b>MENU</b>
<b>CLEAR</b>
<b>1/2/3/4/5</b>
<b>6/7/8/9/0</b>
<b>DOLBY PL II</b>
<b>DISPLAY</b>
<b>ZOOM</b>
<b>SET UP</b>
<b>/ S - TITLE</b>
<b>VOLUME +</b>
<b>VOLUME -</b>
<b>SKIP/SCAN +</b>
<b>SKIP/SCAN -</b>
<b>UP</b>
<b>DOWN</b>
<b>LEFT</b>
<b>RIGHT</b>
<b>ENTER</b>
<b>/ RETURN</b>
<b>SLEEP</b>
<b>SOUND</b>
<b>RDS</b>
<b>PROGRAM</b>

<b>MARKER</b>
<b>OPEN / CLOSE</b>
<b>PAUSE / STEP</b>
<b>STOP</b>
<b>REW / SLOW SCAN -</b>
<b>PLAY</b>
<b>FWD / SLOW SCAN +</b>
<b>/ AUDIO</b>
<b>SEARCH</b>
<b>CD / DVD</b>
<b>BAND</b>
<b>AUX</b>
<b>DIMMER</b>
<b>ANGLE</b>
<b>PRESET +</b>
<b>PRESET -</b>
<b>REPEAT</b>
<b>REPEAT A - B</b>
<b>TITLE</b>
<b>PTY</b>
<b>PTY SEARCH</b>

POWER, MUTE, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0DOLBY PL, DISPLAY, ZOOM, SET ARRIBA, / S, TITLE, VOLUME +, VOL +, VOLUME, VOL, SKIP/SCAN +, SKIP/SCAN, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, SLEEP, SOUND, TV/DTV, RDS, INFO, PROGRAM, EPG, MARKER, FAV, OPEN / CLOSE, / NET TV, PAUSE / STEP, STOP, / SMART, REW / SLOW SCAN, VERDE, PLAY, AMARILLO, FWD / SLOW SCAN +, AZUL, / AUDIO, SEARCH, / DVD, BAND, AUX, DIMMER, ANGLE, PRESET +, P +, PRESET, REPEAT, REPEAT A, TITLE, PTY, PTY SEARCH, .