

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU/SETUP
EXIT
1/2/3/4/5
6/7/8/9/0
SOURCE
-/--
INDEX
SIZE
MIX
TEXT
VOL+
VOL -
P+
P -
UP
DOWN
LEFT
RIGHT
OK
RECALL
SLEEP
DVD / USB
DISPLAY INFO

EPG / ZOOM -
FAV
HOLD
RED /GOTO
GREEN / AB
YELLOW / REPEAT
BLUE / ANGLE
SOUND MODE
DVD MENU
CANCEL
AUDIO
REVEAL
PICTURE MODE
SCALER
SUBTITLE
SKIP NEXT / PREV
TITLE
RADIO
PBC
EJECT
PAUSE
STOP
REW
PLAY
FWD

POWER, MUTE, MENU/SETARRIBA, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, / SOURCE, INDEX, SIZE, MIX, TEXT, VOL+, VOL, ABAJO, IZQUIERDA, DERECHA, RECALL, BACK, SLEEP, DVD / USB, TV/DTV, DISPLAY, INFO, EPG, / ZOOM, EPG, FAV, HOLD, ROJO /GOTO, ROJO, VERDE, / AB, VERDE, AMARILLO, / REPEAT, AMARILLO, AZUL /, ANGLE, AZUL, SOUND, MODE, DVD MENU, CANCEL, AUDIO, REVEAL, PICTURE, SCALER, SUBTITLE, SKIP, NEXT / PREV, SHIFT, + P+/, TITLE, RADIO, PBC, EJECT, PAUSE, STOP, REW, PLAY, FWD, .