

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTING
MENU
EXIT
1/2/3/4/5
6/7/8/9/0
INPUT DVD
CHANNEL SELECT
DISPLAY
CENTER FOCUS
DOWNMIX
SUBTITLE
VOLUME+
VOLUME -
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER / SET
RETURN
TIMER
INPUT TV
SUPER SURROUND

OSD
BAND
SUBWOOFER
PAUSE
STOP
REW
PLAY
FWD
AUDIO
TOP MENU
INPUT VCR
FM MODE
POSITION MEMORY
PROLOGIC
SETUP
ENTER
REPEAT
REPEAT A - B
TEST
SOUND FIELD CONTR.
PLAY MODE

POWER, MUTING, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT DVD, / SOURCE, CHANNEL, SELECT, DISPLAY, CENTER FOCUS, ABAJOMIX, SUBTITLE, VOLUME+, VOL+, VOLUME, VOL, SKIP, NEXT, PREV, ABAJO, IZQUIERDA, DERECHA, ENTER / SET, RETURN, BACK, TIMER, SLEEP, INPUT, TV/DTV, SARRIBAER SURROUND, INFO, OSD, EPG, BAND, FAV, SUBWOOFER, / NET TV, PAUSE, STOP, / SMART, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO, TOP MENU, INPUT VCR, FM MODE, SHIFT, POSITION MEMORY, PROLOGIC, SETARRIBA, ENTER, REPEAT, REPEAT, TEST, SOUND FIELD, CONTR, PLAY MODE, .