


FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
EXIT / TITLE
1/2/3/4/5
6/7/8/9/0
SOURCE
-/--
DISPLAY
ASPECT
P – MODE
TEXT
VOL+
VOL -
CH+
CH -
UP
DOWN
LEFT
RIGHT
OK

SLEEP
MEDIA
S – MODE

D. MENU
FAV
HOLD / FREEZE
RED / GO TO
GREEN / ANGLE
YELLOW / REPEAT
BLUE / A – B
AUDIO / LANG
ZOOM / SIZE
D. SETUP
SUBTITLE
SUBPAGE
TV / RADIO
EJECT
PAUSE
STOP
SKIP NEXT / INDEX
SKIP PREV
REW
PLAY
FWD

POWER, MUTE, MENU, EXIT / TITLE, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, / SOURCE, DISPLAY, ASPECT, MODE, TEXT, VOL+, VOL, CH+, ABAJO, IZQUIERDA, DERECHA, BACK, SLEEP, MEDIA, TV/DTV, INFO, D MENU, EPG, FAV, HOLD / FREEZE, / SMART, ROJO / GO TO, ROJO, VERDE / ANGLE, VERDE, AMARILLO / REPEAT, AMARILLO, AZUL / A, AZUL, AUDIO, / LANG, ZOOM / SIZE, D SETARRIBA, SUBTITLE, SUBPAGE, TV / RADIO, TV/DTV, EJECT, PAUSE, STOP, SKIP NEXT / INDEX, SKIP PREV, REW, PLAY, FWD, .