

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



MUTE
MENU
EXIT
1/2/3/4/5
6/7/8/9/0
SOURCE
/ 10+
Q. VIEW
P. MODE
/ PROGRAM
VOL+
VOL -
P+
P-
UP
DOWN
LEFT
RIGHT
OK
SLEEP
CH. LIST
i / INFO
GUIDE
FAV

RED
GREEN
YELLOW
BLUE
S. MODE
D. MENU
/ SEARCH
/ A - B
I/II / AUDIO
/ D. CALL
SCREEN
/ ANGLE / REC. LIST
/ SETUP
SUBTITLE
SKIP NEXT
SKIP PREV
/ REPEAT
/ TITLE
OPEN / CLOSE
STOP
PAUSE
RECORD
REV.
PLAY / INDEX
FWD

POWER, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, / SOURCE, / 10+, Q VIEW, P MODE, / PROGRAM, VOL+, VOL, ABAJO, IZQUIERDA, DERECHA, SLEEP, CH LIST, TV/DTV, i / INFO, INFO, GUIDE, EPG, FAV, ROJO, VERDE, AMARILLO, AZUL, S MODE, D MENU, / SEARCH, / A, I/II / AUDIO, / D CALL, SCREEN, / ANGLE, REC LIST, / SETARRIBA, SUBTITLE, SKIP NEXT, SKIP PREV, / REPEAT, BACK, / TITLE, OPEN, / CLOSE, STOP, PAUSE, RECORD, REV, PLAY / INDEX, FWD, .