

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



MUTE
MENU
EXIT / SLOW
1/2/3/4/5
6/7/8/9/0
USB
LIST / PBC
DISPLAY
ZOOM
Q. PLAY
TTX
VOL+
VOL -
CH+
CH -
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
DVD / DVB
INFO
EPG / P/N

FAV / A-B
RED
GREEN
YELLOW
BLUE
AUDIO
SEARCH
VIDEO
SETUP
SUBTITLE
SKIP NEXT
SKIP PREV
PG. UP
PG. DN
REPEAT
TV / RADIO
TITLE
RANDOM
EJECT
PAUSE
STOP
ANGLE
REW
PLAY
FWD

POWER, MUTE, MENU, EXIT / SLOW, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0USB, / SOURCE, LIST / PBC, DISPLAY, ZOOM, Q PLAY, TTX, VOL+, VOL, CH+, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, DVD / DVB, TV/DTV, INFO, EPG /, P/N, EPG, FAV / A, FAV, ROJO, VERDE, AMARILLO, AZUL, AUDIO, SEARCH, VIDEO, SETARRIBA, SUBTITLE, SKIP, NEXT, PREV, SHIFT, REPEAT, TV / RADIO, TITLE, RANDOM, EJECT, PAUSE, STOP, ANGLE, REW, PLAY, FWD, .