

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY / ON
HOME MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
INPUT SELECT
→ / CM SKIP
DISPLAY
PLAY LIST / MENU
SHOWVIEW
[] / SUBTITLE
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
TV / DVD
DISC HISTORY
DISC NAV. / TOP MENU
NAVI. MARK
OPEN / CLOSE
PAUSE

STOP
REC
REV. SCAN
PLAY
FWD SCAN
[] / AUDIO
DVD
HDD
TV DIRECT REC
EASY TIMER
STEP/SLOW REW
STEP/SLOW FWD
CHP. MARK
TIMER REC
ANGLE
STOP REC
REC MODE
PLAY MODE
TV COI
POWER
INPUT SELECT
VOLUME+/-
CHANNEL+/-

STANDBY / ON, POWER, HOME, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT SELECT, SOURCE, CM SKIP, DISPLAY, PLAY LIST / MENU, SHOWVIEW, / SUBTITLE, SKIP, NEXT, SKIP, PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, TV / DVD, TV/DTV, DISC HISTORY, INFO, DISC NAV / TOP MENU, EPG, NAVI MARK, FAV, OPEN / CLOSE, / NET TV, PAUSE, STOP, / SMART, REC, ROJO, REV, SCAN, VERDE, PLAY, AMARILLO, FWD SCAN, AZUL, / AUDIO, MUTE, DVD, HDD, TV DIRECT REC, EASY TIMER, STEP/SLOW REW, STEP/SLOW FWD, CHP MARK, TIMER, ANGLE, STOP REC, REC MODE, PLAY MODE, TV CONTROL, INPUT SELECT, SHIFT, VOLUME+, VOL+, CHANNEL+, P+, .