


FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
 El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
 Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY
MUTE
 / MENU
EXIT
1/2/3/4/5
6/7/8/9/0
 / SOURCE
WWW / BROWSER
i / DISPLAY
SIZE
 / SET.
TXT / MIX
VOL+
VOL -
CH+
CH -
UP
DOWN
LEFT
RIGHT
ENTER
 / MOUSE
TV / RADIO
INDEX
 / HOME

SCREENSHOT
HOLD
RED
GREEN
YELLOW
BLUE
AUDIO
CANCEL
REVEAL
SUBTITLE
SKIP NEXT
SKIP PREV
 / REFRESH
STOP
REW
PLAY / PAUSE
FWD

STANDBY, POWER, MUTE, / MENU, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 0/6/7/8/9/, 0 / SOURCE, / SOURCE, WWW, / BROWSER, i / DISPLAY, SIZE, SET, TXT / MIX, VOL+, VOL, CH+, ABAJO, IZQUIERDA, DERECHA, ENTER, / MOUSE, BACK, TV / RADIO, TV/DTV, INDEX, INFO, / HOME, EPG, SCREENSHOT, FAV, HOLD, / SMART, ROJO, VERDE, AMARILLO, AZUL, AUDIO, CANCEL, REVEAL, SUBTITLE, SKIP NEXT, SKIP PREV, SHIFT, + P, / REFRESH, STOP, REW, PLAY / PAUSE, FWD, .