

# **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
INPUT NEXT
TITL. LIST/DISC MENU
COPY TO DVD
ZOOM
ANGLE
SUBTITLE
CH+
CH-
UP
DOWN
LEFT
RIGHT
OK
BACK
TV/VCR
INFO
TITLE MENU/PLAYLIST
BOOKMARK
EJECT
PAUSE

STOP
REC
REW
PLAY
FWD
AUDIO
INPUT DVD
INPUT VCR
>100
COPY TO VCR
SKIP
SKIP PREV.
SKIP NEXT
REPEAT/MODE
REC TIMER
ANY KEY
REC PAUSE
REC SPEED

POWER, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT, NEXT, TITL, LIST/DISC MENU, COPY TO DVD, ZOOM, ANGLE, SUBTITLE, CH+, ABAJO, IZQUIERDA, DERECHA, BACK, TV/VCR, TV/DTV, INFO, TITLE MENU/PLAYLIST, EPG, BOOKMARK, FAV, EJECT, PAUSE, STOP, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO, MUTE, INPUT DVD, INPUT VCR, COPY TO VCR, SKIP, SKIP PREV, SKIP NEXT, REPEAT/MODE, REC TIMER, SLEEP, ANY KEY, REC PAUSE, REC SPEED, .