

# **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
VIDEO 1
FM/AM
DISPLAY
ZOOM
ANGLE
S-TITLE
VOL+
VOL-
SKIP NEXT
SKIP PREV.
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
SLEEP
CD/DVD
MARKER

PROG.
SEARCH
PAUSE/STEP
STOP
REW
PLAY
FWD
AUDIO
SET-UP
TEST TONE
SOUND MODE
BY PASS
LEVEL
VIDEO 2
TITLE
PRESET PREV.
PRESET NEXT
REPEAT
REPEAT A-B
DELAY

POWER, MUTE, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0VIDEO, FM/AM, DISPLAY, ZOOM, ANGLE, TITLE, VOL+, VOL-, SKIP NEXT, SKIP PREV., ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, SLEEP, CD/DVD, TV/DTV, MARKER, INFO, PROG, EPG, SEARCH, FAV, PAUSE/STEP, STOP, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO, SET, TEST TONE, SOUND MODE, BY PASS, LEVEL, VIDEO 2, PRESET PREV., PRESET NEXT, REPEAT, DELAY, .