

# **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
EXIT
1/2/3/4/5
6/7/8/9/0
INPUT NEXT
SHIFT
FL DISPLAY
ZOOM
SPEAKER TOGGLE
TEXT
VOL+
VOL-
CH+ / PRESET NEXT
CH- / PRESET PREV.
UP
DOWN
LEFT
RIGHT
OK
BACK
SLEEP
EQUALIZER
DISC SELECTION +

SURROUND ON
PRO LOGIC
SUB-WOOFER
DISC MANAGER
AUDIO
SETUP
TOP MENU
DISC 1/2/3/4/5
DISC NEXT
SEAT POSITION
PROGRESSIVE SCAN
ENTER
SKIP PREV.
SKIP NEXT
REPEAT
EJECT
PAUSE
STOP
REW
PLAY
FWD

POWER, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT NEXT, SHIFT, FL DISPLAY, ZOOM, SPEAKER TOGGLE, TEXT, VOL+, VOL-, CH+ / PRESET NEXT, / PRESET PREV, ABAJO, IZQUIERDA, DERECHA, BACK, SLEEP, EQUALIZER, EPG, DISC SELECTION +, FAV, SURROUND ON, ROJO, PRO LOGIC, VERDE, SUB, WOOFER, AMARILLO, DISC MANAGER, AZUL, AUDIO, SETARRIBA, TOP MENU, DISC 1/2/3/4/5, DISC NEXT, SEAT POSITION, PROGRESSIVE SCAN, ENTER, SKIP PREV, SKIP NEXT, REPEAT, EJECT, PAUSE, STOP, REW, PLAY, FWD, .