

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.

POWER
MUTE
TV MENU
EXIT
1/2/3/4/5
6/7/8/9/0
SOURCE
LIST
DISPLAY
ASPECT
MIX
TEXT
VOL+
VOL -
CH+
CH -
UP
DOWN
LEFT
RIGHT
OK
RETURN
SLEEP
TV / RADIO
INFO

EPG
FAV
FREEZE
HOLD
RED
GREEN
YELLOW
BLUE
TV AUDIO
DVD MENU
SOUND
PIC
DVD AUDIO
TITLE
DVD / USB

REVEAL
SIZE
ANGLE
SUBTITLE
SUBPAGE
SKIP NEXT
SKIP PREV
RECALL / GO TO
INDEX

DVD SETUP
PBC
EJECT
STOP
REW
PLAY / PAUSE
FWD

DVD SETARRIBA, EPG, PBC, FAV, EJECT, STOP, REW, VERDE, PLAY / PAUSE, AMARILLO, FWD, AZUL, POWER, MUTE, TV MENU, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, SOURCE, LIST, DISPLAY, ASPECT, MIX, TEXT, VOL+, VOL, CH+, ABAJO, IZQUIERDA, DERECHA, RETURN, BACK, SLEEP, TV / RADIO, TV/DTV, INFO, FREEZE, HOLD, / SMART, ROJO, AUDIO, DVD MENU, SOUND, PIC, DVD AUDIO, TITLE, DVD / USB, SHIFT, REVEAL, SIZE, ANGLE, SUBTITLE, SUBPAGE, SKIP, NEXT, PREV, RECALL / GO, INDEX, .