

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY
MUTING
MENU
TOP MENU
1 / LAST M
2 / COND. M
3 / FUNC. M
4 / AUDIO
5 / ANGLE
6 / SUBTITLE
7 / LATE NIGHT
8 / T-D/ST
9 / SURROUND
0 / RANDOM
10+
DISPLAY
ACOUSTIC CONTROL
VOL -/+
INP. SEL. PREV./NEXT
UP
DOWN
LEFT
RIGHT
OK
RETURN
SLEEP
DIMMER
PROGRAM
MODE
PAUSE MD/CDR
STOP MD/CDR/TAPE
STEP/SLOW BACK
PLAY MD/CDR/TAPE
STEP/SLOW FWD
ON
DVD SETUP
CLEAR
CLOCK
SEARCH
SKIP PREV./NEXT
REPEAT
TIMER
A-B
PAUSE
STOP
REW
PLAY
FWD

STANDBY, POWER, MUTING, MUTE, MENU, TOP MENU, EXIT, 1 / LAST, 2 / COND, 3 / FUNC, 4 / AUDIO, 5 / ANGLE, 6 / SUBTITLE, 7 / LATE, NIGHT, 8 / T, D/ST, 9 / SURROUND, 0 / RANDOM, 010+, DISPLAY, ACOUSTIC, CONTROL, VOL, INP SEL PREV/NEXT, ABAJO, IZQUIERDA, DERECHA, RETURN, BACK, SLEEP, DIMMER, INFO, PROGRAM, EPG, MODE, FAV, PAUSE MD/CDR, STOP MD/CDR/TAPE, STEP/SLOW BACK, VERDE, PLAY MD/CDR/TAPE, AMARILLO, STEP/SLOW FWD, AZUL, DVD SETARRIBA, CLEAR, CLOCK, SEARCH, SKIP PREV/NEXT, REPEAT, TIMER, PAUSE, STOP, REW, PLAY, FWD, .