

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
DVD MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
DVD CD
AUTO
DISPLAY
ZOOM
SYSTEM SETUP
PROGRAM
VOL+
VOL -
SKIP NEXT
SKIP PREV
UP
DOWN
LEFT
RIGHT
OK
RETURN
TIMER CLOCK
TV
TOP MENU

SOUND
EJECT
PAUSE
STOP
REW
PLAY
FWD
QUIET MIDNIGHT
AUDIO
HOME MENU
LINE L1/L2
BASS MODE
DIALOGUE
VIRTUAL SB
TEST TONE
CH LEVEL
SURROUND
ADVANCED
ROOM SETUP
DIMMER
ANGLE
SUBTITLE
REPEAT
RADIO
RANDOM

POWER, MUTE, DVD, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0DVD, / SOURCE, AUTO, DISPLAY, ZOOM, SYSTEM, SETARRIBA, PROGRAM, VOL+, VOL, SKIP, NEXT, PREV, ABAJO, IZQUIERDA, DERECHA, RETURN, BACK, TIMER, CLOCK, SLEEP, TV/DTV, TOP MENU, EPG, SOUND, FAV, EJECT, / NET TV, PAUSE, STOP, / SMART, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, QUIET, MIDNIGHT, AUDIO, HOME MENU, LINE L1/L2, BASS MODE, DIALOGUE, VIRTUAL SB, TEST, TONE, CH LEVEL, SURROUND, ADVANCED, ROOM SETARRIBA, DIMMER, ANGLE, SUBTITLE, REPEAT, RADIO, RANDOM, .