

# **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
SUB-MENU
TOP MENU/DIR. NAV.
1/2/3/4/5
6/7/8/9/0
INPUT NEXT
EXTERNAL LINK
SHOW VIEW
FUNCTIONS
CH+
CH-
UP
DOWN
LEFT
RIGHT
OK
RETURN
TIME SLIP
INFO
GUIDE
DRIVE SELECT
RED/DISPLAY
GREEN/STATUS
YELLOW/CREATE CH.
BLUE/ERASE

TIMER
AUDIO
*/CANCEL
INPUT DVD
INPUT HDD
INPUT SD
MANUAL SKIP
SKIP PREV.
SKIP NEXT
DIRECT TV REC.
DUBBING
PROG/CHECK
FLEXIBLE REC.
REC. MODE
PAUSE
STOP
REC
REW
PLAY
FWD

POWER, SUB, MENU, TOP MENU/DIR, NAV, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT NEXT, EXTERNAL, LINK, SHOW VIEW, FUNCTIONS, CH+, ABAJO, IZQUIERDA, DERECHA, RETURN, BACK, TIME SLIP, SLEEP, INFO, GUIDE, EPG, DRIVE SELECT, FAV, ROJO/DISPLAY, ROJO, VERDE/STATUS, VERDE, AMARILLO/CREATE, AMARILLO, AZUL/ERASE, AZUL, TIMER, AUDIO, MUTE, /CANCEL, INPUT DVD, INPUT HDD, INPUT SD, MANUAL SKIP, SKIP PREV, SKIP NEXT, DIRECT TV REC, TV/DTV, DUBBING, PROG/CHECK, FLEXIBLE REC, REC MODE, PAUSE, STOP, REC, REW, PLAY, FWD, .