

# **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.

POWER	DVD EJECT	VCR EJECT
AUDIO	DVD PAUSE	VCR REC
DVD MENU	DVD STOP	VCR PAUSE
1/2/3/4/5	DVD REW	VCR STOP
6/7/8/9/0	DVD FWD	VCR PLAY
INPUT NEXT	DVD PLAY	VCR REW
DISPLAY	TIMER	VCR FWD
SEARCH	SURROUND	VCR AUDIO
ZOOM	VCR MENU	PROGRAM
SETUP	COUNTER MEMORY	
SUBTITLE	0-9	
INPUT DVD	QUICK FIND	
INPUT VCR	VCR DISP INFO	
UP	TIMER REC	
DOWN	C.RESET	
LEFT	+10	
RIGHT	LEFT	
OK	RIGHT	
BACK	DOWN	
RETUEN	UP	
MODE	SPEED	
TOP MENU/ SHOWVIEW	REPEAT	
ANGLE	SLOW	
DISC NAVIG.	TV/VCR	
D.AUDIO	VCR BACK	

POWER, AUDIO, MUTE, DVD MENU, MENU, 1/2/3/4/5, 6/7/8/9/, INPUT NEXT, DISPLAY, SEARCH, ZOOM, SETARRIBA, SUBTITLE, INPUT DVD, INPUT VCR, ABAJO, IZQUIERDA, DERECHA, BACK, RETUEN, SLEEP, MODE, TV/DTV, TOP, MENU/, SHOWVIEW, INFO, ANGLE, FAV, DISC NAVIG, EPG, DAUDIO, ROJO, DVD EJECT, DVD PAUSE, DVD STOP, DVD REW, VERDE, DVD FWD, AZUL, DVD PLAY, AMARILLO, TIMER, SURROUND, VCR MENU, COUNTER, MEMORY, EXIT, QUICK FIND, VCR DISP, TIMER REC, CRESET, SPEED, SHIFTOK, REPEAT, SLOW, TV/VCR, VCR BACK, VOL, VCR EJECT, VCR REC, VCR PAUSE, VCR STOP, VCR PLAY, PLAY, VCR REW, VCR FWD, VCR AUDIO, PROGRAM, .