

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MENU
TOP MENU / DISC NAV.
1/2/3/4/5
6/7/8/9/0
INPUT SELECT
DISPLAY
ONE TOUCH COPY
ANGLE
CH+
CH-
UP
DOWN
LEFT
RIGHT
OK
RETURN
TV/DVD
INFO
GUIDE
PAUSE LIVE TV
RED
GREEN
YELLOW
BLUE

AUDIO
HOME MENU
CLEAR
HDD / DVD
SUBTITLE
CM SKIP
STEP REV.
STEP FWD
STOP REC
SKIP PREV.
SKIP NEXT
CM REVERSE
TIME REC
HELP
REC MODE
PLAY MODE
PAUSE
STOP
REC
REW
PLAY
FWD

POWER, MENU, TOP MENU / DISC NAV, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT SELECT, DISPLAY, ONE TOUCH COPY, ANGLE, CH+, ABAJO, IZQUIERDA, DERECHA, RETURN, BACK, TV/DVD, TV/DTV, INFO, GUIDE, EPG, PAUSE LIVE TV, ROJO, VERDE, AMARILLO, AZUL, AUDIO, MUTE, HOME MENU, CLEAR, HDD / DVD, SUBTITLE, CM SKIP, STEP REV, STEP FWD, STOP REC, SKIP PREV, SKIP NEXT, CM REVERSE, TIME REC, SLEEP, HELP, REC MODE, PLAY, MODE, FAV, PAUSE, STOP, REC, REW, FWD, .