

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



⏻
MUTING
DVD MENU
DVD TOP MENU
1/2/3/4/5
6/7/8/9/0
MOVIE / MUSIC
SOUND FIELD
DISPLAY
ANGLE
FUNCTION
VOL+
VOL -
SKIP NEXT/PRESET+
SKIP PREV/PRESET -
UP
DOWN
LEFT
RIGHT
OK
RETURN
PICTURE NAVI
DYNAMIC BASS
OPEN / CLOSE
PAUSE

STOP
REW/SLOW BK./TUN -
PLAY
FWD/SLOW F./TUN+
AUDIO
SYSTEM MENU
CLEAR
[] / DISPLAY
VIDEO FORMAT
SUBTITLE/D. TUNING
DISC SKIP
◀ / REPLAY
▶ / ADVANCE
T
TV ⏻
1/2/3/4/5
6/7/8/9/0
INPUT
-/--
VOL+/-
CH+
CH -
ENTER
THEATRE SYNC.

ORIGINAL, SARRIBAERIOR, POWER, MUTING, MUTE, DVD MENU, MENU, DVD TOP MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0MOVIE / MUSIC, / SOURCE, SOUND FIELD, DISPLAY, ANGLE, FUNCTION, VOL+, VOL, SKIP NEXT/, PRESET+, SKIP, PREV/, PRESET, ABAJO, IZQUIERDA, DERECHA, RETURN, BACK, PICTURE NAVI, INFO, DYNAMIC BASS, FAV, OPEN / CLOSE, / NET TV, PAUSE, STOP, / SMART, REW/SLOW BK/, TUN, VERDE, PLAY, AMARILLO, FWD/SLOW F/, TUN+, AZUL, AUDIO, SYSTEM MENU, CLEAR, / DISPLAY, VIDEO FORMAT, SUBTITLE/D TUNING, DISC SKIP, / REPLAY, / ADVANCE, 0INPUT, SHIFT, VOL+/, CH+, ENTER, THEATRE SYNC, .