

## **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
EXIT
1/2/3/4/5
6/7/8/9/0
VIDEO SOUND
SD / HD
LOGO
P. BASS
CD RIPPING
SOUND EDIT
VOL+
VOL-
TUNING / CH +
TUNING / CH -
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
SLEEP
TUNER MANUAL
INFO

TUNER MEMORY
TUNER PRESET
EJECT
PAUSE
STOP
REW
PLAY
FWD
AUDIO
CANCEL
INPUT AUX
INPUT DVD
INPUT PORT
INPUT TUNER
MO / ST
ZOOM
SUBTITLE
SLOW
SKIP PREV.
SKIP NEXT
REPEAT
STEP
DIMMER
REMAIN

POWER, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0VIDEO SOUND, SD / HD, LOGO, P BASS, CD RIPPING, SOUND EDIT, VOL+, VOL, TUNING / CH +, TUNING / CH, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, SLEEP, TUNER MANUAL, TV/DTV, INFO, TUNER MEMORY, EPG, TUNER PRESET, FAV, EJECT, PAUSE, STOP, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO, CANCEL, INPUT AUX, INPUT DVD, INPUT PORT, INPUT TUNER, MO / ST, ZOOM, SUBTITLE, SLOW, SKIP PREV, SKIP NEXT, REPEAT, STEP, DIMMER, REMAIN, .