

# FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.  
El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.  
Revise que localiza todas las funciones que necesita antes de realizar la compra.



|                        |
|------------------------|
| <b>POWER</b>           |
| <b>MUTE</b>            |
| <b>MENU</b>            |
| <b>1/2/3/4/5</b>       |
| <b>6/7/8/9/0</b>       |
| <b>AM / FM</b>         |
| <b>+10</b>             |
| <b>DISPLAY</b>         |
| <b>PTY</b>             |
| <b>PROLOGIC MUSIC</b>  |
| <b>PROLOGIC CINEMA</b> |
| <b>VOL -/+</b>         |
| <b>PRESET NEXT</b>     |
| <b>PRESET PREV</b>     |
| <b>UP</b>              |
| <b>DOWN</b>            |
| <b>LEFT</b>            |
| <b>RIGHT</b>           |
| <b>OK</b>              |
| <b>BACK</b>            |
| <b>FM MONO</b>         |
| <b>MOVIE FILTER</b>    |
| <b>MEMORY</b>          |
| <b>PRESETS</b>         |
| <b>PRESET SCAN</b>     |

|                      |
|----------------------|
| <b>CENTER FOCUS</b>  |
| <b>2 CH. STEREO</b>  |
| <b>5 CH. STEREO</b>  |
| <b>5.1 CH.</b>       |
| <b>AUX</b>           |
| <b>CD</b>            |
| <b>PHONO</b>         |
| <b>TAPE 1</b>        |
| <b>TAPE 2</b>        |
| <b>TUNER</b>         |
| <b>VIDEO 1</b>       |
| <b>VIDEO 2</b>       |
| <b>VIDEO 3</b>       |
| <b>ANTENNA A/B</b>   |
| <b>DELAY DOWN</b>    |
| <b>DELAY UP</b>      |
| <b>SURROUND DOWN</b> |
| <b>SURROUND UP</b>   |
| <b>SURROUND</b>      |
| <b>FM IF NAR.</b>    |
| <b>TUNE / PRESET</b> |
| <b>SPEAKER A</b>     |
| <b>SPEAKER B</b>     |
| <b>ZONE</b>          |
| <b>ZONE OFF</b>      |

POWER, MUTE, MENU, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0AM / FM, / SOURCE, DISPLAY, PTY, PROLOGIC MUSIC, PROLOGIC, CINEMA, VOL, PRESET, NEXT, PREV, ABAJO, IZQUIERDA, DERECHA, BACK, FM MONO, TV/DTV, MOVIE FILTER, INFO, MEMORY, EPG, PRESETS, FAV, PRESET SCAN, / NET TV, CENTER FOCUS, ROJO, 2 CH STEREO, VERDE, 5 CH, STEREO, AMARILLO, 51 CH, AZUL, AUX, PHONO, TAPE, TUNER, VIDEO, ANTENNA A/B, DELAY ABAJO, DELAY ARRIBA, SURROUND ABAJO, SURROUND ARRIBA, SURROUND, FM IF NAR, TUNE, / PRESET, SPEAKER A, SPEAKER, ZONE, ZONE OFF, .