

# **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



<b>POWER</b>
<b>MUTE</b>
<b>MENU</b>
<b>1/2/3/4/5</b>
<b>6/7/8/9/0</b>
<b>TV / AV / S</b>
<b>-/--</b>
<b>DISPLAY</b>
<b>VIDEO MODE</b>
<b>AUDIO MODE</b>
<b>TELETEXT</b>
<b>VOL+</b>
<b>VOL -</b>
<b>CH+</b>
<b>CH -</b>
<b>UP</b>
<b>DOWN</b>
<b>LEFT</b>
<b>RIGHT</b>
<b>MENU</b>
<b>S</b>
<b>OFF TIMER</b>
<b>INDEX</b>
<b>SURROUND</b>
<b>WIDE</b>

<b>HOLD</b>
<b>RED</b>
<b>GREEN</b>
<b>YELLOW</b>
<b>BLUE</b>
<b>VIDEO MUTE</b>
<b>PIP / POP</b>
<b>SWAP</b>
<b>POSITION</b>
<b>SCART</b>
<b>COMPONENT</b>
<b>PC / DVI</b>
<b>SUB SOURCE</b>
<b>PREVIEW / FULL</b>
<b>ZOOM</b>
<b>ROTATE</b>
<b>SUB PAGE</b>
<b>PAGE DOWN</b>
<b>PAGE UP</b>
<b>CARD PLAY</b>
<b>AI AUDIO</b>
<b>SOUND</b>
<b>AUTO PLAY</b>

POWER, MUTE, MENU, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0TV / AV / S, / SOURCE, DISPLAY, VIDEO MODE, AUDIO MODE, TELETEXT, VOL+, VOL, CH+, ABAJO, IZQUIERDA, DERECHA, BACK, OFF, TIMER, SLEEP, INDEX, INFO, SURROUND, FAV, WIDE, / NET TV, HOLD, / SMART, ROJO, VERDE, AMARILLO, AZUL, VIDEO MUTE, PIP / POP, SWAP, POSITION, SCART, COMPONENT, PC / DVI, SUB SOURCE, SHIFT, PREVIEW / FULL, ZOOM, ROTATE, SUB PAGE, PAGE ABAJO, PAGE ARRIBA, CARD PLAY, AI AUDIO, EPG, SOUND, AUTO PLAY, .