

# **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



<b>MENU</b>
<b>TOP MENU</b>
<b>1/2/3/4/5</b>
<b>6/7/8/9/0</b>
<b>INPUT SELECT</b>
<b>DISPLAY</b>
<b>OPTIONS</b>
<b>TEXT</b>
<b>SKIP NEXT/DAY+</b>
<b>SKIP PREV/DAY-</b>
<b>UP</b>
<b>DOWN</b>
<b>LEFT</b>
<b>RIGHT</b>
<b>ENTER</b>
<b>RETURN</b>
<b>TIME/TEXT</b>
<b>TV/DVD</b>
<b>i+</b>
<b>EJECT</b>
<b>PAUSE</b>
<b>STOP</b>

<b>REC</b>
<b>REW/SLOW BACK</b>
<b>PLAY</b>
<b>FWD/SLOW FWD</b>
<b>TIMER</b>
<b>AUDIO</b>
<b>SYSTEM MENU</b>
<b>DVD</b>
<b>HDD</b>
<b>SYNCHRO REC.</b>
<b>SUBTITLE</b>
<b>PROG+</b>
<b>PROG -</b>
<b>INSTANT REPLAY</b>
<b>INSTANT ADVANCE</b>
<b>TV/RADIO</b>
<b>TITLE LIST</b>
<b>REC. MODE</b>
<b>REC. STOP</b>
<b>RED</b>
<b>GREEN</b>
<b>YELLOW/CHAP. MARK</b>
<b>BLUE/MARK ERASE</b>

POWER, MENU, TOP MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT SELECT, SOURCE, DISPLAY, OPTIONS, TEXT, SKIP, NEXT/DAY, PREV/DAY, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, TIME, /TEXT, SLEEP, /DVD, TV/DTV, INFO, EPG, FAV, EJECT, / NET TV, PAUSE, STOP, / SMART, REC, ROJO, REW/SLOW, VERDE, PLAY, AMARILLO, FWD, /SLOW, AZUL, TIMER, AUDIO, MUTE, SYSTEM MENU, DVD, HDD, SYNCHRO REC, SUBTITLE, PROG+, PROG, INSTANT REPLAY, INSTANT ADVANCE, TV/RADIO, TV/DTV, TITLE LIST, REC MODE, REC STOP, AMARILLO/CHAP, MARK, AZUL/, MARK, ERASE, .