

## **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.

<b>DV</b>
AUDIO
MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
DVD
+10
DISPLAY
ZOOM
SETUP
SUBTITLE
AB
REPEAT
SKIP NEXT
SKIP PREV
DOWN
UP
LEFT
RIGHT
ENTER
RETURN
ANGLE
SEARCH MODE

TOP MENU
MODE
OPEN / CLOSE
PAUSE
STOP
REW
PLAY
FWD
<b>VC</b>
AUDIO
MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
VCR
+10
DISPLAY
QUICK-FIND
SPEED
SUBTITLE / IT-SET
CH+
CH -
DOWN

UP
LEFT
RIGHT
SLOW
INDEX / SEARCH
FUNCTION
OPEN / CLOSE
PAUSE
STOP
RECORD
REW
PLAY
FWD

DVD, AUDIO, MUTE, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0DVD, SOURCE, DISPLAY, ZOOM, SETARRIBA, SUBTITLE, VOL, REPEAT, VOL+, SKIP, NEXT, PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, ANGLE, TV/DTV, SEARCH MODE, INFO, TOP MENU, EPG, MODE, FAV, OPEN, / CLOSE, / NET TV, PAUSE, STOP, / SMART, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, VCR, 0VCR, SHIFT, QUICK, FIND, SPEED, SUBTITLE / IT, SET, CH+, SLOW, SLEEP, INDEX / SEARCH, FUNCTION, OPEN / CLOSE, RECORD, ROJO, .