

# **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



<b>POWER</b>
<b>MUTE</b>
<b>MENU</b>
<b>CLEAR</b>
<b>1/2/3/4/5</b>
<b>6/7/8/9/0</b>
<b>S.T.CH</b>
<b>SEARCH MODE</b>
<b>PICTURE MODE</b>
<b>SETUP</b>
<b>FUNCTION</b>
<b>VOLUME +</b>
<b>VOLUME -</b>
<b>SKIP NEXT</b>
<b>SKIP PREV</b>
<b>UP</b>
<b>DOWN</b>
<b>LEFT</b>
<b>RIGHT</b>
<b>ENTER</b>
<b>RETURN</b>
<b>SLEEP</b>
<b>TRIM</b>
<b>I.MEMO</b>
<b>PROGRAM/RANDOM</b>

<b>ANGLE</b>
<b>OPEN/CLOSE</b>
<b>PAUSE</b>
<b>STOP</b>
<b>REW</b>
<b>PLAY</b>
<b>FWD</b>
<b>AUDIO</b>
<b>TOP MENU</b>
<b>AB</b>
<b>RDS</b>
<b>SURROUND</b>
<b>TUNE / BAND</b>
<b>BASS</b>
<b>ON SCREEN</b>
<b>ZOOM</b>
<b>REPEAT</b>
<b>TEST</b>
<b>SOUND</b>
<b>SLOW FWD</b>
<b>SLOW REW</b>
<b>A.REPLAY</b>
<b>S.T.CH ON/OFF</b>

POWER, MUTE, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0STCH, SEARCH MODE, PICTURE MODE, SETARRIBA, FUNCTION, VOLUME+, VOL+, VOLUME, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, SLEEP, TRIM, TV/DTV, IMEMO, INFO, PROGRAM/RANDOM, EPG, ANGLE, FAV, OPEN/CLOSE, / NET TV, PAUSE, STOP, / SMART, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO, TOP MENU, RDS, SURROUND, TUNE / BAND, BASS, ON SCREEN, ZOOM, REPEAT, TEST, SOUND, SLOW FWD, SLOW REW, AREPLAY, STCH, ON/OFF, ROJO, .