

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
TUNE PRESET
1/2/3/4/5
6/7/8/9/0
CD
+10
DISPLAY
DYNAMIC
CENTER
FREQUENCY DIRECT
VOL+
VOL -
CH+
CH -
UP
DOWN
LEFT
RIGHT
OK
PRESET
TUNE
FM MONO
TP

EQ
BAND
SCAN
SUBWOOFER
SUR+
SURROUND
STEREO
VIDEO 1
VIDEO 2
VIDEO 3
PHONO
5CH
TAPE 1
7CH
TAPE 2
TUNER
VIDEO 4
PRO LOGIC CINEMA
PRO LOGIC MUSIC
PTY
TA
TONE

POWER, MUTE, MENU, TUNE PRESET, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0CD, / SOURCE, DISPLAY, DYNAMIC, CENTER, FREQUENCY DIRECT, VOL+, VOL, CH+, ABAJO, IZQUIERDA, DERECHA, PRESET, BACK, TUNE, SLEEP, FM MONO, TV/DTV, INFO, EPG, BAND, FAV, SCAN, ROJO, SUBWOOFER, VERDE, SUR+, AMARILLO, SURROUND, AZUL, STEREO, VIDEO 1, VIDEO 2, VIDEO 3, PHONO, 5CH, TAPE 1, 7CH, TAPE 2, TUNER, VIDEO 4, 0PRO LOGIC CINEMA, PRO LOGIC MUSIC, PTY, TONE, .