

# **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
NOT USED
MENU
EXIT
1/2/3/4/5
6/7/8/9/0
INPUT NEXT
INPUT DVD
DISPLAY
PICTURE MDOE
MODE
SUBTITLE
VOL+
VOL-
SKIP NEXT CHAP
SKIP PREV CHAP
UP
DOWN
LEFT
RIGHT
OK
BACK
REPEAT
TV VIDEO
NOT USED

MENU TOGGLE
ANGLE
EJECT
PAUSE
STOP
REC
REW
PLAY
FWD
AUDIO
TOPMENU
INPUT VCR
PROGRAM
ZOOM
RETURN
TV VCR
REW SLOW
FWD SLOW

POWER, NOT, USED, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, INPUT NEXT, INPUT DVD, DISPLAY, PICTURE MDOE, MODE, SUBTITLE, VOL+, VOL, SKIP NEXT CHAP, SKIP PREV CHAP, ABAJO, IZQUIERDA, DERECHA, BACK, REPEAT, SLEEP, TV VIDEO, TV/DTV, NOT USED, INFO, MENU TOGGLE, EPG, ANGLE, FAV, EJECT, PAUSE, STOP, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO, TOPMENU, INPUT VCR, PROGRAM, ZOOM, RETURN, TV VCR, REW SLOW, FWD SLOW, .