

# FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



/ I
MUTE
/ MENU
CANCEL
1 / RDS DISPLAY
2
3 / TA
4 / PTY-
5 / PTY SERCH
6 / PTY+
7/8/9
0 / VIDEO SEL.
SOUND EDIT
NT/PAL / EZ VIEW
ZOOM
MO/ST / SLOW
SUB TITLE
VOLUME+
VOLUME -
TUNING/CH +
TUNING/CH -
UP
DOWN
LEFT
RIGHT

/ ENTER
/ RETURN
SLEEP
DIMMER / TV/VIDEO
INFO
P. SCAN / TUN. MEMO.
DOLBY PL. II MODE
OPEN / CLOSE
REMAIN
STOP
SKIP PREV.
PLAY / PAUSE
SKIP NEXT
AUDIO
DVD
TUNER
AUX
DSP / EQ.
LOGO
SLIDE MODE
TEST TONE
REPEAT
STEP
DIGEST
DOLBY PL. II EFFECT

POWER, MUTE, / MENU, MENU, CANCEL, EXIT, 1 / RDS DISPLAY, 3 / TA, / PTY, 5 / PTY SERCH, 6 / PTY+, 7/8/9, 0 / VIDEO SEL, 0SOUND EDIT, NT/PAL / EZ VIEW, ZOOM, MO/ST / SLOW, SUB TITLE, VOLUME+, VOL+, VOLUME, VOL, TUNING/CH, ABAJO, IZQUIERDA, DERECHA, / ENTER, / RETURN, BACK, SLEEP, DIMMER / TV/VIDEO, TV/DTV, INFO, P SCAN / TUN MEMO, EPG, DOLBY PL II MODE, FAV, OPEN / CLOSE, / NET TV, REMAIN, STOP, / SMART, SKIP, PREV, VERDE, PLAY / PAUSE, AMARILLO, SKIP NEXT, AZUL, AUDIO, DVD, TUNER, AUX, DSP / EQ, LOGO, SLIDE MODE, TEST TONE, REPEAT, STEP, DIGEST, DOLBY PL II EFFECT, .