

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



MUTE
MENU
1/2/3/4/5
6/7/8/9/0
SOURCE
EDIT
OSD
ZOOM
SETUP
SUBTITLE
VOLUME+
VOLUME-
SKIP NEXT
SKIP PREV.
UP
DOWN
LEFT
RIGHT
REPEAT
TIMER
DVD
TITLE
PROG.
BOOK MARK

EJECT
PAUSE / STEP
STOP
REC
REW
PLAY
FWD
AUDIO
DISC
V. MODE
ANGLE
CH-
CH+
A-B RPT.
N / P
INTRO
QUALITY
CHAP. MARK
SLOW - ◀
SLOW - ▶

POWER, MUTE, MENU, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SOURCE, / AV, EDIT, OSD, ZOOM, SETARRIBA, SUBTITLE, VOLUME+, VOL+, VOLUME, VOL, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, REPEAT, BACK, TIMER, SLEEP, DVD, TV/DTV, TITLE, INFO, PROG, EPG, BOOK MARK, FAV, EJECT, PAUSE / STEP, STOP, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO, DISC, V MODE, ANGLE, CH+, B RPT, N / P, TV/DTV, INTRO, QUALITY, CHAP, MARK, SLOW, .