

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
EXIT
1 / RDS DISPLAY
2
3 / TA
4 / PTY-
5 / PTY SEARCH
6 / PTY+
7/8/9/0
DOLBY PL. II MODE
MO/ST / SLOW
LOGO
ZOOM
SOUND EDIT
SUB TITLE
VOLUME -/+
SKIP PREV./NEXT
UP
DOWN
LEFT
RIGHT
ENTER
↻ / RETURN

SLEEP
TV / VIDEO
INFO
SD/HD / TUNER MEM.
P. BASS
OPEN / CLOSE
PAUSE
STOP
REW
PLAY
FWD
AUDIO
CANCEL
DVD
TUNER
PORT
AUX
DOLBY PL. II EFFECT
DSP / EQ.
TUNING/CH -
TUNING/CH +
REPEAT
STEP
DIMMER
REMAIN

POWER, MUTE, MENU, EXIT, 1 / RDS DISPLAY, 3 / TA, 4 / PTY, 5 / PTY SEARCH, 6 / PTY+, 7/8/9/, 07/8/9/, 0DOLBY PL II MODE, MO/ST / SLOW, LOGO, ZOOM, SOUND EDIT, SUB TITLE, VOLUME, VOL, SKIP PREV/NEXT, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, RETURN, SLEEP, TV / VIDEO, TV/DTV, INFO, SD/HD / TUNER MEM, EPG, P BASS, FAV, OPEN / CLOSE, PAUSE, STOP, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO, CANCEL, DVD, TUNER, PORT, AUX, DOLBY PL II EFFECT, DSP / EQ, TUNING/CH, TUNING/CH +, REPEAT, BACK, STEP, DIMMER, REMAIN, .