

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



| |
|------------------|
| POWER ON |
| AUDIO |
| M / MENU |
| CLEAR |
| 1/2/3/4/5 |
| 6/7/8/9/0 |
| SEARCH MODE |
| +10 |
| D / DISPLAY |
| PICTURE ADJUST |
| ANGLE |
| SUBTITLE |
| SKIP NEXT |
| SKIP PREV. |
| UP |
| DOWN |
| LEFT |
| RIGHT |
| ENTER |
| R / RETURN |
| NTSC / PAL |
| DIMMER |
| PROGRAM / DIRECT |
| CALL |
| OPEN / CLOSE |

| |
|---------------------|
| STILL / PAUSE |
| STOP |
| SLOW / SEARCH REW |
| PLAY |
| SLOW / SEARCH FWD |
| POWER OFF |
| SUPER AUDIO CD SET. |
| T / TOP MENU |
| HDMI / DVI FORMAT |
| RANDOM |
| ZOOM |
| SETUP |
| PAGE- |
| PAGE+ |
| HDMI / DVI SELECT |
| REPEAT |
| A-B |
| MARKER |
| PURE DIRECT MEMORY |
| PURE DIRECT SELECT |
| |
| |
| |
| |

POWER ON, POWER, AUDIO, MUTE, M / MENU, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0SEARCH MODE, D / DISPLAY, PICTURE ADJUST, ANGLE, SUBTITLE, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, R / RETURN, BACK, NTSC / PAL, TV/DTV, DIMMER, INFO, PROGRAM / DIRECT, EPG, CALL, FAV, OPEN / CLOSE, STILL, / PAUSE, STOP, SLOW/SEARCH, REW, VERDE, PLAY, AMARILLO, SLOW/SEARCH FWD, AZUL, POWER OFF, SARRIBAER AUDIO CD SET, T / TOP MENU, HDMI/DVI, FORMAT, RANDOM, ZOOM, SETARRIBA, PAGE, PAGE+, HDMI/DVI SELECT, REPEAT, SLEEP, MARKER, PURE DIRECT MEMORY, PURE DIRECT SELECT, .