FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando. El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto. Revise que localiza todas las funciones que necesita antes de realizar la compra.



	0
	AUDIO
	M / MENU
E	/ EXIT / CLEAR
	1/2/3/4/5
	6/7/8/9/0
	AV
	DVD
	Q / QLTY.
	ZOOM
	ANGLE
	/ SUBTITLE
P	R+ / SKIP NEXT
P	R - / SKIP PREV
	UP
	DOWN
	LEFT
	RIGHT
	OK
R	ETURN / GO BACK
	TV • VIDEO
	-0- / LIGHT
	◯ / LIB.
	EDIT
	PAUSE

STOP	
REC	
REW	
PLAY	
FWD	
PURPLE / TV LIV	E
RED / AGAIN	
GREEN / ADVANCE	:
YELLOW / INFO	
BLUE / GUIDE	
	Ĩ

POWER, AUDIO, MUTE, M / MENU, MENU, E / EXIT / CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0AV, / SOURCE, DVD, Q / QLTY, ZOOM, ANGLE, / SUBTITLE, PR+ / SKIP NEXT, / SKIP, PREV, ABAJO, IZQUIERDA, DERECHA, RETURN, / GO BACK, BACK, TV VIDEO, TV/DTV, / LIGHT, INFO, / LIB, FAV, EDIT, / NET TV, PAUSE, STOP, / SMART, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, PURPLE, / TV LIVE, ROJO / AGAIN, / ADVANCE, AMARILLO / INFO, AZUL / GUIDE, .