

# **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



<b>STANDBY / ON</b>
<b>MUTE</b>
<b>DISC MENU</b>
<b>CLEAR</b>
<b>1/2/3/4/5</b>
<b>6/7/8/9/0</b>
<b>INPUT</b>
<b>SPEAKER</b>
<b>DISPLAY</b>
<b>ZOOM / ATR.</b>
<b>ANGLE</b>
<b>SUBTITLE / TIMER</b>
<b>VOL+</b>
<b>VOL -</b>
<b>SKIP NEXT</b>
<b>SKIP PREV</b>
<b>UP</b>
<b>DOWN</b>
<b>LEFT</b>
<b>RIGHT</b>
<b>ENTER</b>
<b>RETURN / A.DUB</b>
<b>TV / VCR</b>
<b>INDEX / MARK</b>
<b>OPEN/CLOSE</b>

<b>PAUSE</b>
<b>STOP</b>
<b>REC</b>
<b>REW</b>
<b>PLAY</b>
<b>FWD</b>
<b>AUDIO</b>
<b>DVD</b>
<b>FM / AM</b>
<b>VCR</b>
<b>SCREEN FIT / SVHS</b>
<b>SETUP</b>
<b>TEST</b>
<b>TRK+</b>
<b>TRK -</b>
<b>REPEAT / MODE</b>
<b>STEP</b>
<b>SOUND MODE</b>
<b>TITLE / SPEED</b>
<b>SOUND EFFECT</b>

STANDBY / ON, POWER, MUTE, DISC MENU, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT, / SOURCE, SPEAKER, DISPLAY, ZOOM / ATR, ANGLE, SUBTITLE / TIMER, VOL+, VOL, SKIP NEXT, SKIP, PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN / ADUB, BACK, TV / VCR, TV/DTV, INDEX / MARK, INFO, OPEN, /CLOSE, / NET TV, PAUSE, STOP, / SMART, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, AUDIO, DVD, FM / AM, VCR, SCREEN FIT, / SVHS, SETARRIBA, TEST, TRK+, TRK, REPEAT / MODE, STEP, SLEEP, SOUND MODE, TV/DTV, TITLE, / SPEED, SOUND EFFECT, FAV, .