

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY / ON
AUDIO
/ MENU
CANCEL
1/2/3/4/5
6/7/8/9/0
INPUT SEL.
ANY KEY
SUBTITLE
SKIP NEXT
SKIP PREV.
UP
DOWN
LEFT
RIGHT
+ / OK
○ / RETURN
TIMER REC.
TV / VCR
INFO
TITLE M. / PLAYLIST
REC. SPEED
OPEN / CLOSE
PAUSE
STOP

REC
REW
PLAY
FWD
DISC M. / TITLE LIST
DVD
VCR
COPY TO DVD
COPY TO VCR
PROG/TRK -
PROG/TRK +
MARKER
SKIP / F. ADV.

STANDBY / ON, POWER, AUDIO, MUTE, / MENU, MENU, CANCEL, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT SEL, / AV, ANY KEY, SUBTITLE, SKIP NEXT, SKIP PREV, ABAJO, IZQUIERDA, DERECHA, / OK, / RETURN, BACK, TIMER REC, SLEEP, TV / VCR, TV/DTV, INFO, TITLE M / PLAYLIST, EPG, REC SPEED, FAV, OPEN / CLOSE, PAUSE, STOP, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, DISC M / TITLE LIST, DVD, VCR, COPY TO DVD, COPY TO VCR, PROG/TRK, MARKER, SKIP / F ADV, .