

## **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



STANDBY
MUTE
MENU / PBC
1/2/3/4/5
6/7/8/9/0
+10
DISPLAY
ZOOM
SETUP
SUBTITLE
VOLUME+
VOLUME-
TUNING+
TUNING-
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
SLEEP
NTSC / PAL
TITLE
PROG.
LISTENING

OPEN / CLOSE
MEMO / SLOW
STOP
S. REW / STATION-
PLAY / PAUSE
S. FWD / STATION+
AUDIO
DVD
TUNER
AUX
GO TO
ANGLE
LANGUAGE
TEST TONE
SELECT
REPEAT
ST/MO / STEP
A-B

STANDBY, POWER, MUTE, MENU /, PBC, MENU, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0+1, DISPLAY, ZOOM, SETARRIBA, SUBTITLE, VOLUME+, VOL+, VOLUME, VOL, TUNING+, TUNING, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, SLEEP, NTSC, / PAL, TV/DTV, TITLE, INFO, PROG, EPG, LISTENING, FAV, OPEN / CLOSE, MEMO, / SLOW, STOP, S REW, / STATION, VERDE, PLAY / PAUSE, AMARILLO, S FWD / STATION+, AZUL, AUDIO, DVD, TUNER, AUX, GO TO, ANGLE, LANGUAGE, TEST TONE, SELECT, REPEAT, ST/MO, / STEP, .