

# **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



OPERATE
AUDIO
START MENU
EXIT
1/2/3/4/5
6/7/8/9/0
INPUT
-/--
DISPLAY / BACKLIGHT
ZOOM / REC. MODE
FUNCTION
SUBTITLE
SKIP PREV./NEXT
DOWN / UP
LEFT / RIGHT
SET / ENTER
RETURN
TIMER ON/OFF
TV / DVD
CHAP.MARK / RGB OFF
ON SCR. / TAMP. PRO.
DIRECT REC. TV
OPEN / CLOSE
STILL / PAUSE
STOP / LIVE

REC
REV.
PLAY
FWD
ORIG. PLAYLIST MENU
C / ERASE
P. IN P.
HDD
REC. LIST
SHOW VIEW
ANGLE
SLOW
SKIP SEARCH
CH -/+
REPLAY
TIMER SHIFT
DVD
DUBBING
DIRECT
REC. PAUSE
REC. STOP
RED / B
GREEN / C
YELLOW / D
BLUE / A

OPERATE, POWER, AUDIO, MUTE, START MENU, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0INPUT, DISPLAY / BACKLIGHT, ZOOM / REC MODE, FUNCTION, SUBTITLE, SKIP PREV/NEXT, ABAJO / ARRIBA, IZQUIERDA / DERECHA, SET / ENTER, RETURN, BACK, TIMER ON/OFF, SLEEP, TV / DVD, TV/DTV, CHAP, MARK / RGB OFF, INFO, ON SCR / TAMP PRO, EPG, DIRECT REC TV, FAV, OPEN / CLOSE, STILL / PAUSE, STOP / LIVE, REC, ROJO, REV, VERDE, PLAY, AMARILLO, FWD, AZUL, ORIG PLAYLIST MENU, C / ERASE, P IN P, HDD, LIST, SHOW VIEW, ANGLE, SLOW, IZQUIERDA, SKIP SEARCH, DERECHA, REPLAY, TIMER, SHIFT, DVD, TV/DTV, DUBBING, DIRECT, PAUSE, REC STOP, ROJO / B, VERDE / C, AMARILLO / D, AZUL / A, .