

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.
 El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.
 Revise que localiza todas las funciones que necesita antes de realizar la compra.

DV	
POWER	
AUDIO	
SYSTEM MENU	
CLEAR	
1/2/3/4/5	
6/7/8/9/0	
DVD	
LIST/DISC MENU	
DISPLAY	
ZOOM	
SHOWV. / VIDEOPL.+	
D. DUBBING	
SKIP NEXT	
SKIP PREV	
UP	
DOWN	
LEFT	
RIGHT	
OK	
RETURN	
TIMER	
REC. MODE	
TITLE	

CHAPTER	
THUMBNAIL	
OPEN / CLOSE	
PAUSE / STEP	
STOP	
RECORD	
REW	
PLAY	
FWD	
REPEAT	
SEARCH	
MARKER	
VC	
SYSTEM MENU	
CLEAR	
1/2/3/4/5	
6/7/8/9/0	
VCR	
DISPLAY	
DOWN	
UP	
LEFT	
RIGHT	
OK	

TV / VIDEO	:
OPEN / CLOSE	:
PAUSE / STEP	:
STOP	:
REC	:
REW	:
PLAY	:
FWD	:

DVD, POWER, AUDIO, MUTE, SYSTEM MENU, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0DVD, / SOURCE, LIST/DISC MENU, DISPLAY, ZOOM, SHOWV / VIDEOPL+, D DUBBING, SKIP NEXT, SKIP, PREV, ABAJO, IZQUIERDA, DERECHA, RETURN, BACK, TIMER, SLEEP, REC MODE, TV/DTV, TITLE, INFO, CHAPTER, EPG, THUMBNAIL, FAV, OPEN / CLOSE, / NET TV, PAUSE / STEP, STOP, / SMART, RECORD, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, REPEAT, SEARCH, MARKER, VCR, 0VCR, SHIFT, TV / VIDEO, TV/DTV, REC, .