

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTE
MENU
1/2/3/4/5
6/7/8/9/0
BAND LEVEL
DISPLAY
VOLUME+
VOLUME-
CH+
CH-
UP
DOWN
LEFT
RIGHT
ENTER
RETURN
SLEEP
XM MEMORY
SRCH. MODE
SCENE 1
SCENE 2
SCENE 3
SCENE 4
STANDBY

AUDIO SEL.
CD
DTV / CBL.
DVD
DVR
MD / CDR
MULTI CH. IN
TUNER
V-AUX
XM
PROG. PREV.
PROG. NEXT
XM PRESET PREV.
XM PRESET NEXT
XM CAT. PREV.
XM CAT. NEXT
A-E/CAT. PREV.
A-E/CAT. NEXT
ENT.
ENHANCER
NIGHT
STRAIGHT
SUR. DECODE

POWER, MUTE, MENU, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0BAND LEVEL, DISPLAY, VOLUME+, VOL+, VOLUME, VOL, CH+, ABAJO, IZQUIERDA, DERECHA, ENTER, RETURN, BACK, SLEEP, XM MEMORY, EPG, SRCH MODE, FAV, SCENE 1, ROJO, SCENE 2, VERDE, SCENE 3, AMARILLO, SCENE 4, AZUL, STANDBY, AUDIO SEL, DTV / CBL, DVD, DVR, MD / CDR, MULTI CH IN, TUNER, AUX, PROG PREV, PROG NEXT, VOL+, XM PRESET PREV, XM PRESET NEXT, XM CAT PREV, CAT NEXT, E/CAT PREV, E/CAT NEXT, ENT, ENHANCER, NIGHT, STRAIGHT, SUR, DECODE, .