

# FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER
MUTING
MENU / PLAYLIST
CANCEL
1/2/3/4/5
6/7/8/9/0
DVD / CD
≥10
FL DISPLAY
ZOOM
FUNCTIONS
SUBTITLE
VOLUME -/+
SKIP NEXT/CH+
SKIP PREV/CH-
DOWN / UP
LEFT / RIGHT
ENTER
RETURN
SLEEP
TV / VCR
SUBWOOFER LEVEL
ADVAN. DISC REVIEW
DOLBY PL. II
PAUSE

STOP
SLOW/SEARCH REW
PLAY
SLOW/SEARCH FWD
AUDIO
TOP MENU / DIR. NAV.
CH. SELECT
QUICK OSD
GROUP
SETUP
TEST
QUICK REPLAY
MANUAL SKIP
REPEAT
ANGLE / PAGE
PROGRESSIVE
PLAY MODE
PLAY SPEED
T
TV POWER
TV / AV
TV VOL +/-
TV CH +/-

POWER, MUTING, MUTE, MENU / PLAYLIST, MENU, CANCEL, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0DVD / CD, / SOURCE, FL DISPLAY, ZOOM, FUNCTIONS, SUBTITLE, VOLUME, VOL, SKIP, NEXT/CH+, PREV/CH, ABAJO / ARRIBA, IZQUIERDA / DERECHA, ENTER, RETURN, BACK, SLEEP, TV / VCR, TV/DTV, SUBWOOFER LEVEL, INFO, ADVAN DISC REVIEW, EPG, DOLBY PL II, FAV, PAUSE, STOP, / SMART, SLOW/SEARCH REW, VERDE, PLAY, AMARILLO, SLOW/SEARCH FWD, AZUL, AUDIO, TOP MENU / DIR NAV, CH SELECT, QUICK OSD, GROARRIBA, SETARRIBA, TEST, QUICK REPLAY, IZQUIERDA, MANUAL SKIP, DERECHA, REPEAT, ANGLE / PAGE, PROGRESSIVE, PLAY MODE, PLAY SPEED, TV POWER, TV / AV, SHIFT, TV VOL, VOL +/, TV CH, P +/, .