

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



POWER VCR
AUDIO
MENU
EXIT
OFF -
OFF+
ON -
ON+
DATE -
DATE+
INPUT
AV LINK
OSD / DISPLAY
INDEX / SKIP NEXT
INDEX / SKIP PREV
UP
DOWN
LEFT
RIGHT
OK
RESET
⌚ / TIMER
SP / LP / EP
SEARCH
PROG. / CHECK

PAUSE / STEP
STOP
REC
REW
PLAY
FWD
CANCEL
∨
∧
TRACK./V-LOCK DOWN
TRACKING/V-LOCK UP
REPLAY
T
POWER TV
AV
VOLUME -
VOLUME+
DOWN
UP

POWER VCR, POWER, AUDIO, MUTE, MENU, EXIT, OFF, OFF+, ON+, DATE, DATE+, INPUT, / SOURCE, AV LINK, OSD / DISPLAY, INDEX / SKIP, NEXT, INDEX / SKIP PREV, ABAJO, IZQUIERDA, DERECHA, RESET, BACK, / TIMER, SLEEP, / LP / EP, TV/DTV, SEARCH, INFO, PROG / CHECK, EPG, PAUSE / STEP, STOP, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, CANCEL, TRACK, LOCK, TRACKING/V, LOCK ARRIBA, REPLAY, POWER TV, SHIFT, + / SOURCE, VOLUME, VOL, VOLUME+, VOL+, .