

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.



SYSTEM OFF
MUTE
SET – UP MENU
CLEAR
1/2/3/4/5
6/7/8/9/0
RANDOM
OSD
ZOOM
ANGLE
SUBTITLE
VOLUME+
VOLUME -
SKIP/STEP NEXT
SKIP/STEP PREV
UP
DOWN
LEFT
RIGHT
ENTER
REPEAT
INFO
PLAYLIST
OPEN
PAUSE/FREEZE

STOP
SEARCH/SLOW REW
PLAY
SEARCH/SLOW FWD
AUDIO
DISC MENU
AUX
D – IN
DISC
PC
RADIO
TV
USB 1
USB 2
VIDEO
SCREEN / SCREEN
PRESETS/PIC.+
PRESETS/PIC. -
TITLE
STATUS

SYSTEM OFF, POWER, MUTE, SET, ARRIBA MENU, MENU, CLEAR, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0RANDOM, OSD, ZOOM, ANGLE, SUBTITLE, VOLUME+, VOL+, VOLUME, VOL, SKIP/STEP NEXT, SKIP/STEP PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, REPEAT, BACK, INFO, PLAYLIST, EPG, OPEN, / NET TV, PAUSE/FREEZE, STOP, / SMART, SEARCH/SLOW, REW, VERDE, PLAY, AMARILLO, SEARCH/SLOW FWD, AZUL, AUDIO, DISC MENU, AUX, DISC, RADIO, USB 1, USB 2, VIDEO, / SCREEN, PRESETS/PIC+, PRESETS/PIC, TITLE, STATUS, .