

FUNCIONES DEL MANDO PROGRAMADO:

En este documento puede visualizar las funciones que se van a programar en el mando.

El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.

Revise que localiza todas las funciones que necesita antes de realizar la compra.

STANDBY/ON
MUTE
HOME MENU / 
1/2/3/4/5
6/7/8/9/0
SOURCE
STATUS
DIMMER
VIDEO PARAM.
AUDIO PARAM.
MEDIA SERVER
VOLUME+
VOLUME -
SKIP NEXT/PRESET+
SKIP PREV/PRESET -
UP
DOWN
LEFT
RIGHT
ENTER
⬅ / RETURN
SLEEP
TV
INTERNET RADIO
D.ACCESS

CLASS
PAUSE
STOP
EXTENDED STEREO
REW / TUNE -
PLAY / BAND
FWD / TUNE+
TOOLS MENU
SAT – CBL
CD
DVD
BD
HDMI1
HDMI2
HDMI3
HDMI4
HDMI5
HDMI6
IPOD/USB
MHL
PANDORA
MULTIZONE ON/OFF
CHANNEL LEVEL
ADV ACTION
ADV DRAMA

ADV GAME
ADV SPORTS
AUTO SURROUND
AUTO OPT Surr
AUTO ALC
AUTO PURE DIRECT
AUTO DIRECT
ADV CLASSICAL
ADV ROCK/POP
ADAPTER
SPEAKERS AB ON
FAV
SPEAKERS A ON
SPEAKERS B ON
SPEAKERS OFF
PLII MOVIE
PLII MUSIC
PLII GAME

STANDBY/ON, POWER, MUTE, HOME MENU /, MENU, 1/2/3/4/5, 6/7/8/9/, 0/SOURCE, / SOURCE, STATUS, DIMMER, VIDEO PARAM, AUDIO PARAM, MEDIA SERVER, VOLUME+, VOL+, VOLUME, VOL, SKIP NEXT/PRESET+, SKIP PREV/PRESET, ABAJO, IZQUIERDA, DERECHA, ENTER, / RETURN, BACK, SLEEP, TV/DTV, INTERNET RADIO, INFO, DACCESS, EPG, CLASS, FAV, PAUSE, STOP, / SMART, EXTENDED, STEREO, ROJO, REW /, TUNE, VERDE, PLAY / BAND, AMARILLO, FWD / TUNE+, AZUL, TOOLS MENU, SAT, CBL, DVD, HDMI1, HDMI2, HDMI3, HDMI4, HDMI5, HDMI6, 0/IPOD, /USB, SHIFT, MHL, PANDORA, MULTIZONE ON/OFF, CHANNEL LEVEL, ADV ACTION, + VOL, ADV DRAMA, + VOL, ADV GAME, + P+, ADV SPORTS, + P, AUTO SURROUND, AUTO OPT SURR, AUTO ALC, AUTO PURE DIRECT, AUTO DIRECT, ADV CLASSICAL,

ADV ROCK/POP, ADAPTER, SPEAKERS AB ON, SPEAKERS A ON, SPEAKERS B ON, SPEAKERS OFF, PLII MOVIE, PLII MUSIC, PLII GAME, .