

# **FUNCIONES DEL MANDO PROGRAMADO:**

En este documento puede visualizar las funciones que se van a programar en el mando.  
 El mapa de botones completo se lo facilitaremos impreso en papel junto con la compra del producto.  
 Revise que localiza todas las funciones que necesita antes de realizar la compra.



<b>VCR</b>
<b>AUDIO</b>
<b>MENU</b>
<b>EXIT</b>
<b>1/2/3/4/5</b>
<b>6/7/8/9/0</b>
<b>AV / INPUT SELECT</b>
<b>-/--</b>
<b>DISPLAY</b>
<b>TV ASPECT</b>
<b>SHOWVIEW</b>
<b>INDEX NEXT</b>
<b>INDEX PREV</b>
<b>UP</b>
<b>DOWN</b>
<b>LEFT</b>
<b>RIGHT</b>
<b>ENTER</b>
<b>/ TIMER</b>
<b>MUSIC / w/PICTURE</b>
<b>PROG. / CHECK</b>
<b>REC. CHECK</b>
<b>PAUSE / STEP</b>
<b>STOP</b>
<b>REC</b>

<b>REW</b>
<b>PLAY</b>
<b>FWD</b>
<b>EXT. LINK</b>
<b>OUTPUT / VCR</b>
<b>CH/TRK/V - LOCK+</b>
<b>CH/TRK/V - LOCK -</b>
<b>AV LINK / OFF TIMER</b>
<b>PROG. PLAY</b>
<b>A / CANCEL/RESET</b>
<b>B / I - TIMER</b>
<b>C / SP/LP/EP</b>
<b>D / VPS/PDC</b>

VCR, POWER, AUDIO, MUTE, MENU, EXIT, 1/2/3/4/5, 6/7/8/9/, 06/7/8/9/, 0AV / INPUT SELECT, / SOURCE, DISPLAY, TV ASPECT, SHOWVIEW, INDEX NEXT, INDEX, PREV, ABAJO, IZQUIERDA, DERECHA, ENTER, / TIMER, SLEEP, MUSIC, / w/PICTURE, TV/DTV, PROG / CHECK, EPG, REC CHECK, FAV, PAUSE / STEP, STOP, / SMART, REC, ROJO, REW, VERDE, PLAY, AMARILLO, FWD, AZUL, EXT LINK, OUTPUT, / VCR, CH/, TRK/V, LOCK+, LOCK, AV LINK / OFF TIMER, PROG PLAY, A / CANCEL/RESET, TIMER, C / SP/LP/EP, D / VPS/PDC, .